


**MF**  
✓MECHANICALLY  
FASTENED**FA**  
✓


FULLY ADHERED

**VQ**  
✓


VAC-Q-ROOF

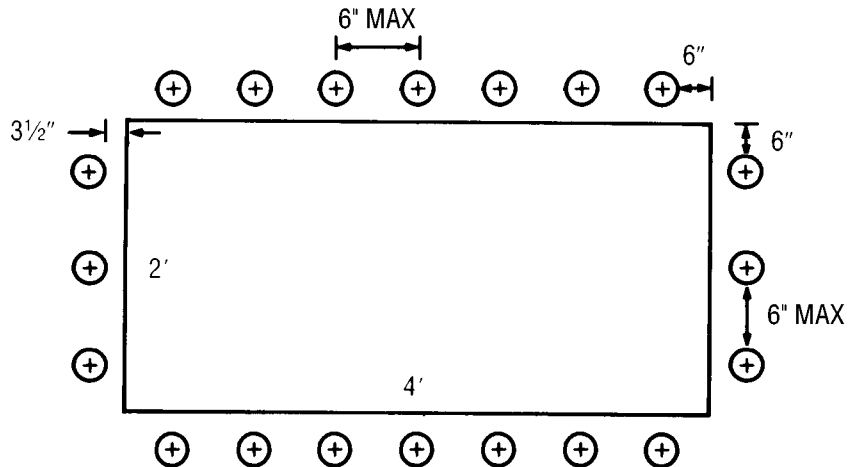

1. ALLOW 3 1/2" FROM EDGE OF PENETRATION TO CENTER OF DISK.
2. ALL FASTENERS TO BE ON ONE FOOT CENTERS.

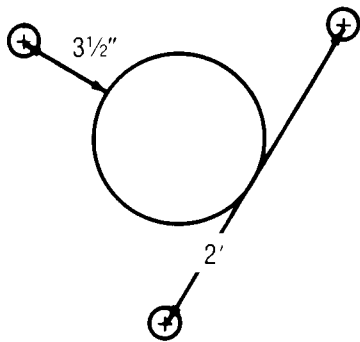

1. MINIMUM OF THREE FASTENERS
2. THREE FASTENERS SPACED ON 2' CENTERS, UP TO 20" PENETRATION DIAMETER
3. 3 1/2" FROM CIRCUMFERENCE OF PENETRATION TO C/L OF FASTENER DISK.

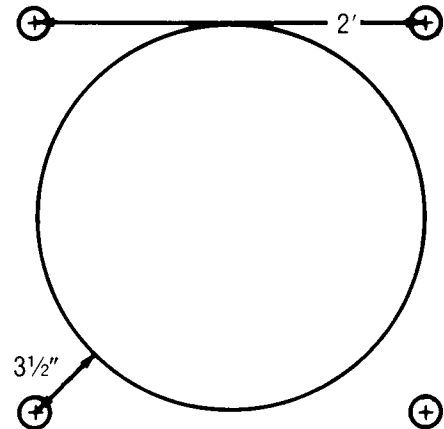

1. FOUR FASTENERS SPACED IN 2' CENTERS, 20" DIAMETER UP TO 30" DIAMETER.
2. 3 1/2" FROM CIRCUMFERENCE OF PENETRATION TO C/L OF FASTENER DISK.

## PENETRATIONS

Fastening Patterns

# Burke Industries

2250 SOUTH TENTH STREET  
SAN JOSE, CA 95112  
800-669-7010 • 408-297-3500

DRAWN

SR/BR

DATE

1998

REV.

M-98